

Installation manual of the blowout duct flange plate kit

PJZ012D081

Use this kit for a direct -blow and duct-less installation.

Replace the plate at the blow outlet of unit and connect the blowout duct according to the following procedure.

The blow outlet assembled on the unit at the shipping from factory, is for connecting duct which produces static pressure of 10Pa or more at the outside of unit.

CAUTION

- (1) Install the kit while the unit is placed on the floor.
It should not be attempted to install it after installation of the unit in place. Otherwise, it will become very difficult to install it. because related sections could be deformed by the weight of unit.
- (2) Do not supply the electric power to the unit during the installation of the kit.
There is the risk of electrical shock or injury be being caught up with revolving parts.


1. Applicable model of unit and type of blowout duct flange plate kit

Type of blowout duct flange plate kit	UT-SAT1EF	UT-SAT2EF	UT-SAT3EF
Model	15, 22, 28, 36	45, 56	71


2. Installation procedure

(Figure shows the state that the unit is placed on a floor. Top and bottom are inverted after installing the unit.)

- (1) Place the unit as shown below.
- (2) Remove the blowout duct flange plate from the unit. Keep the removed tapping screws to reuse later.

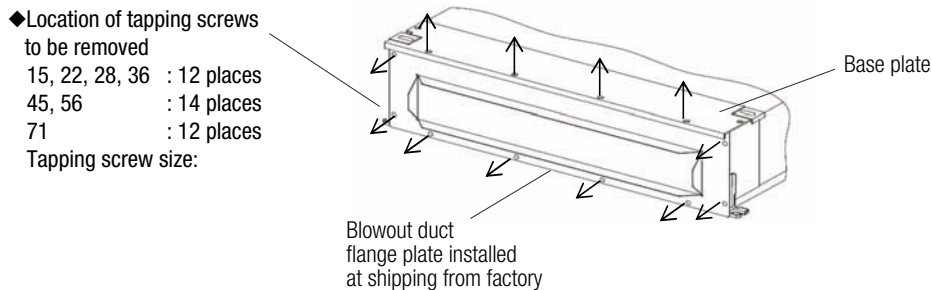


- (3) Install the optional blowout duct flange plate using the tapping screws removed at the step (2) above.
Take care not to damage the insulation when tightening the tapping screws.

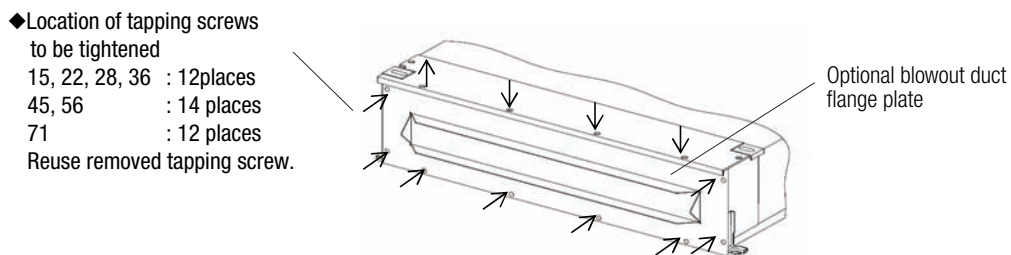

3. Instruction

 - (1) Dimensions of the blowout duct flange of the kit are as shown below.
Dimensions in the following table show the outside measurements of the flange.



	A	B
15,22,28,36	600	70
40,56	860	70
71	1060	70