

# PFD EXTENSION CABLE INSTALLATION MANUAL

PCZ012D008

Model : PFD-15WR-E

Applicable model : PFD1123, PFD1803, PFD2803, PFD1123X4 series and models later than them


This PFD extension cable kit PFD-15WR-E is to be used to extend the signal wiring connected by CnB and the power wiring connected by CnU.

## 1. Accessory parts

No.	Part Name	Q'ty
1	Extension cable for the power wiring (15m)	1
2	Extension cable for the signal wiring (15m)	1
3	Installation manual	1

## 2. Installation procedure

- ① Connect the extension cable for the power wiring between the CnU connectors of PFD box and an indoor unit.
- ② Connect the extension cable for the signal wiring between the CnB connectors of PFD box and a relay kit.
- ③ Remove the original earth wires from PFD box.
- ④ Connect the earth wires of the extension cables for the power and signal wiring to PFD box.
- ⑤ Connect the earth wires to an indoor unit and a relay kit respectively.

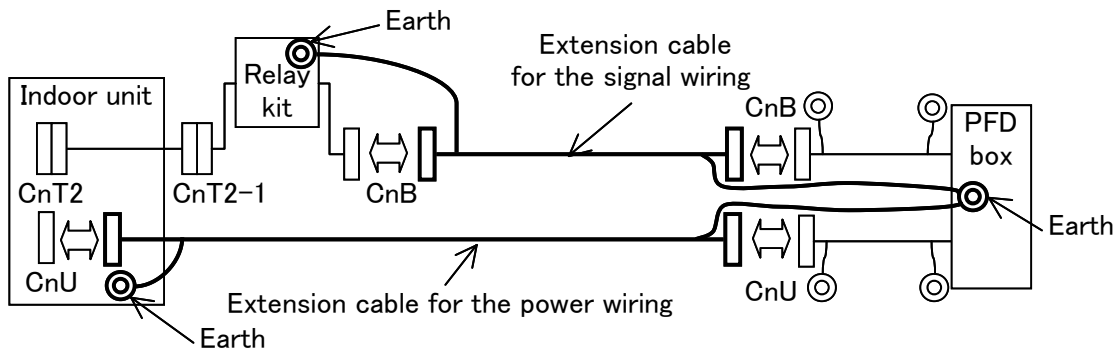

## 分流コントローラ用延長ケーブル 据付要領書

型式 : PFD-15WR-E

適用型式 : PFD1123, PFD1803, PFD2803, PFD1123X4 シリーズ およびこれら以降の型式

この分流コントローラ用延長ケーブル(PFD-15WR-E)は、CnBコネクタで接続される信号線とCnUコネクタで接続される電源線を延長するためのものです。

## 1. 付属品

No.	部品名称	数量
1	電源線用延長ケーブル (15m)	1
2	信号線用延長ケーブル (15m)	1
3	据付要領書	1

## 2. 据付要領

- ① 分流コントローラと室内機のCnUコネクタに電源線用延長ケーブルを接続してください。
- ② 分流コントローラとリレーキットのCnBコネクタに信号線用延長ケーブルを接続してください。

